



# Toshiba Satellite A105-S4284 RAM Replacement

How to replace Toshiba Satellite A105-S4284 RAM

Written By: pfedigan



## INTRODUCTION

This guide will help you replace Toshiba Satellite A105-S4284 RAM. RAM allows memory to be accessed directly in a random order. You might need to replace a RAM if your computer shuts down abruptly, your computer performance is low quality, or the computer fails to install new programs.



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)





### PARTS:

- [PC2-5300 2 GB RAM Chip](#) (1)




## Step 1 — Battery

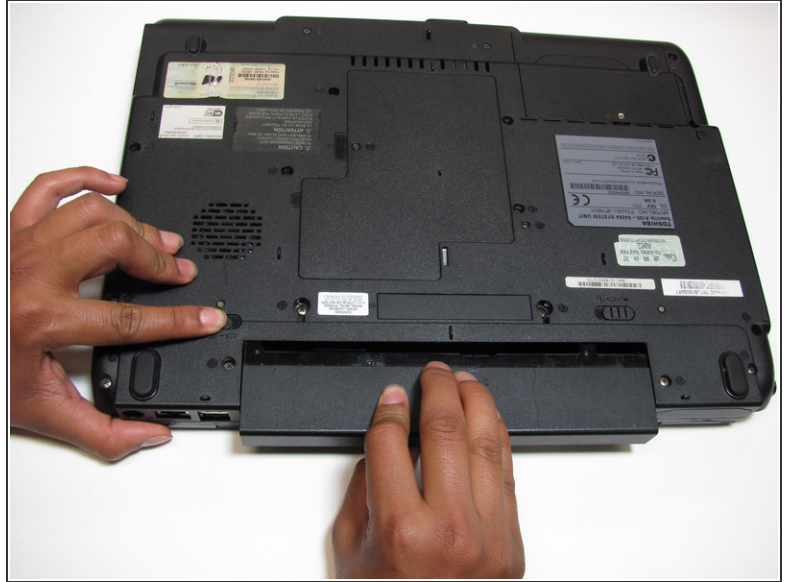

 Make sure your computer is turned off and the computer is not plugged in.


- Turn your laptop upside down, and slide the right release tab outward.
- Using your left hand, hold the left release tab towards the left side and then pull the battery out.

## Step 2 — RAM

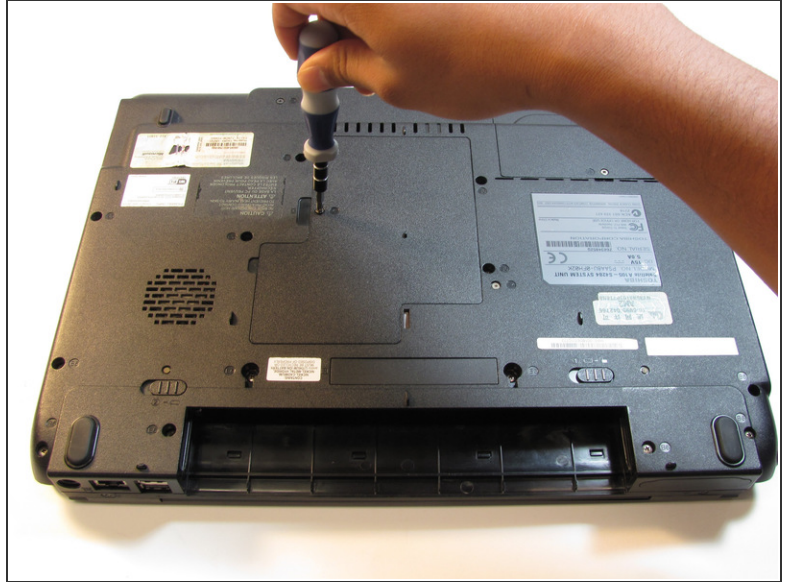




- Loosen the screw located on the cover of the RAM using Phillips #1 screwdriver.
- ❗ You will not be able to remove the screw from the panel as it is designed to stay in the panel.

## Step 3

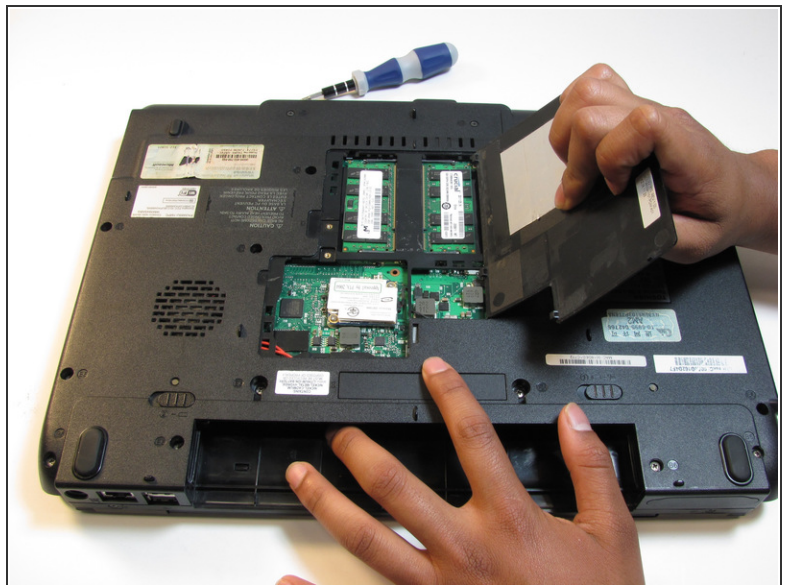

- With your fingers, carefully remove the middle panel by lifting the edge with the indent.

## Step 4

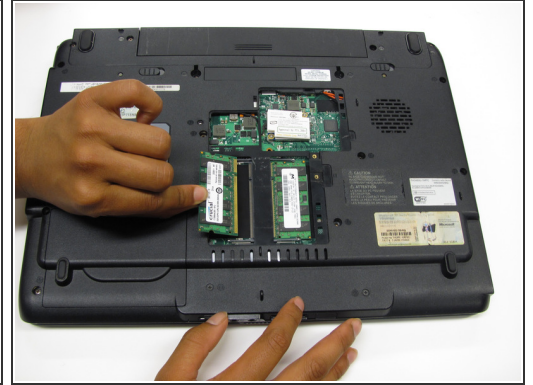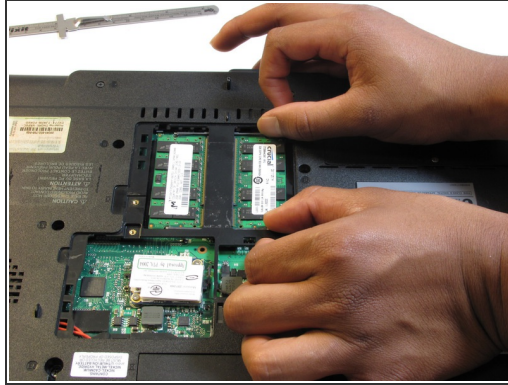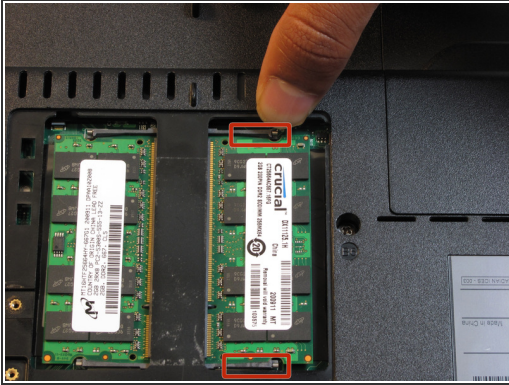

- Using your fingers, release the tabs on both ends of the RAM.
- Pull the RAM out.
- ⓘ The other RAM is released in the same manner.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 02:30:37 PM.